

48002150

AFN
acessórios 4x4



Checklist / Manual de Montagem - Bull bar
W/fog lights - Toyota land Cruiser 200



Checklist / Fitting Instructions - Bull bar
W/fog lights - Toyota land Cruiser 200




Despiezas / Instrucciones de montaje -



3h



1 x1 47001554		2 x1 47001553		3 x1 47001552		4 x1 47001540	
5 x1 47001539		6 x1 47001538		7 x1 47001537		8 x1 47001541	
9 x1 47001510		10 x1 47001509		11 x1 48002121		12 x1 48002191	
13 x1 48002192		14 x2 46005670		15 x1 46005663		16 x1 46005662	
17 x1 46005661		18 x1 46005507		19 x1 46005506		20 x12 45000775	
21 x4 45000069		22 x7 45000067		23 x2 45000058		24 x4 45000048	
Prf. Cb. Sx. M10x35	☐	Prf. Cb. Sx. M12X35	☐	Prf. Cb. Sx. M8x20	☐	Anilha M8x16x1,6	☐
25 x7 45000042		26 x8 45000039		27 x2 45000018		28 x10 45000017	
Anilha M12	☐	Anilha M10	☐	Fêmea Freiada M8	☐	Fêmea Freiada M10	☐
29 x12 45000010		30 x6 45000007		31 x1 46005518			
Anilha Aba Larga M10	☐	Prf. Cb. Sx. M10x30	☐		☐		

Toyota Land cruiser
200 - Standard (2012-
)

AFN
acessórios 4x4

Thank you for choosing AFN products, a lot of time in R&D has gone into perfecting our products. However, if you find problems with any AFN products you have purchased, or if you have any information which would help us to improve our products, please let us know.

If you think there may be a problem either before or after fitting the AFN product, it is best to contact your nearest AFN distributor.

WARNING

- This product should be installed as demonstrated in the product fitting instructions.
- If verified that any component is damaged, please contact your nearest AFN distributor.
- The specified parts, will only fit the models specified by AFN.
- Do not modify any component of the product.
- It is recommended that this product is installed by specialised and trained personnel.
- AFN cannot be responsible for any changes made by the vehicle manufacturer.
- Work safely and use specialised tools at all times.
- Always use protective gear.



size	Torque Nm	Torque lbft
M6	9Nm	4 lbft
M8	22Nm	16 lbft
M10	44Nm	32 lbft
M12	77Nm	57 lbft

- Tools set required:



CONTACTS

R. da Madeira, nº 113
Z. Industrial das Travessas
3700-176 S. João da Madeira
Portugal

Tel.: (+351) 256 838 300
Fax: (+351) 256 838 305
www.afn.pt
geral@afn.pt

COORDINATES

DATUM: European 79
UTM 05.44.100
29T 45.28.300
N 40°54' 14.0"
W 08°28' 35.0"

01




- Before assembling the AFN bull bar, please remove the OEM bumper;
- Please fit the part number 47001540 / 47001541;
- Please use the OEM nuts with supplied washers 45000010

02



- After fitting the above part numbers, please fit the AFN Bull bar; 47001537
- Please use the table shown in the first page, for torque settings.

03

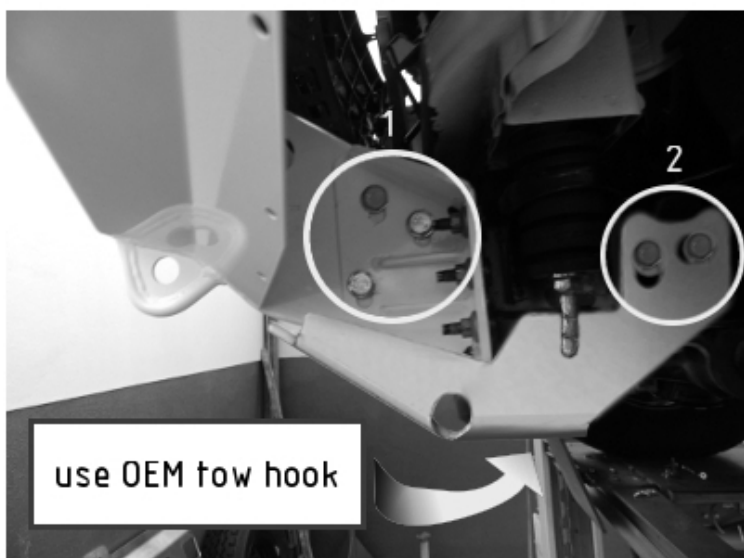

- 1 use the part number 45000007/45000010/45000017
- Use the part number; 46005662/46005663
 - Use the part number; 47001552/47001553 inside de chassis frame.
- 2 Use the part number; 45000067/45000042

04

- After all the bolts in place, please make sure you have a gap between AFN bull bar and the body of the vehicle

05

- After having the bull bar fitted, please fit the part number 47001554;
- This part is a reinforcement of the winch mount

06

- Please fit the part number 47001538 / 47001539
- Use the part number 45000775

07

- After all bolts tightened, please make sure there is enough gap between the body and the AFN bull bar

08

- Please use the part number 46005661
- Use the part number 45000069/45000039
45000017

09

- Please use the supplied 46005670 to hold the OEM grille,
- Use the part number;
45000048/45000058
45000018

13

