

48002295

AFN
acessórios 4x4



Checklist / Manual de Montagem - P.choques frontal c/ envolvente - Toyota Hilux Revo



Checklist / Fitting Instructions - Bull Bar - Toyota Hilux Revo







Despiezas / Instrucciones de montaje -



3h



1 x1 48002230  ☐	2 x1 48002231  ☐	3 x1 48002121  ☐	4 x1 47001718  ☐
5 x1 46005518  ☐	6 x1 46006604  ☐	7 x1 46006603  ☐	8 x4 46006522  ☐
9 x1 46006520  ☐	10 x1 46006519  ☐	11 x1 46006484  ☐	12 x1 46006445  ☐
13 x1 46006442  ☐	14 x1 46006441  ☐	15 x1 46006440  ☐	16 x1 46006439  ☐
17 x1 46006438  ☐	18 x1 46006437  ☐	19 x1 46006436  ☐	20 x10 45001012  ☐ Fem. M6 gaiola
21 x8 45000165 Anilha M14  ☐	22 x12 45000949 Femea de gaiola M4  ☐	23 x12 45000924 Anilha aba larga M4  ☐	24 x12 45000923 Prf. cab. cil. M4x12  ☐
25 x14 45000998 M6x20  ☐	26 x2 45000537 Par. Cab. Red. M8x25  ☐	27 x8 45000402  ☐	28 x4 45000216 Prf. Cb. Sx. M14x30  ☐
29 x8 45000145 Prf. Cab. Red. M5x15  ☐	30 x4 45000110 Prf. Cb. Con. M10x25  ☐	31 x4 45000104 Prf. Sx. M12x30x1,25  ☐	32 x6 45000084 Prf. Cb. Sx. M12x90  ☐
33 x4 45000069 Prf. Cb. Sx. M10x35  ☐	34 x6 45000066 Fêmea Freitada M12  ☐	35 x8 45000061 Anilha M5  ☐	37 x16 45000036 Anilha Aba Larga M12  ☐

Toyota Hilux Revo
(2015-)



38 x3



45000018

Fêmea Frejada M8

39 x14



45000017

Fêmea Frejada M10

40 x6



45000015

Prf. Cb. Sx. M10x25

41 x3



45000014

Prf. Cb. Sx. M8x25

42 x8



45000011

Anilha aba larga M8

43 x32



45000010

Anilha Aba Larga M10

44 x4



45000007

Prf.Cb.Sx.M10x30x1,5

45 x4



45000330

Fêmea Frejada M14

46 x2



45001053

perfil PFGV 0956

46 x2



45000502

Borracha vedação

Acessórios: ____ / ____ / ____

Pecas/Compostos: ____ / ____ / ____

Artigo: ____ / ____ / ____

Embalagem: ____ / ____ / ____

Thank you for choosing AFN products, a lot of time in R&D has gone into perfecting our products. However, if you find problems with any AFN products you have purchased, or if you have any information which would help us to improve our products, please let us know.

If you think there may be a problem either before or after fitting the AFN product, it is best to contact your nearest AFN distributor.

WARNING

- This product should be installed as demonstrated in the product fitting instructions.
- If verified that any component is damaged, please contact your nearest AFN distributor.
- The specified parts, will only fit the models specified by AFN.
- Do not modify any component of the product.
- It is recommended that this product is installed by specialised and trained personnel.
- AFN cannot be responsible for any changes made by the vehicle manufacturer.
- Work safely and use specialised tools at all times.
- Always use protective gear.



size	Torque Nm	Torque lbft
M6	9Nm	4 lbft
M8	22Nm	16 lbft
M10	44Nm	32 lbft
M12	77Nm	57 lbft

- Tools set required:



CONTACTS

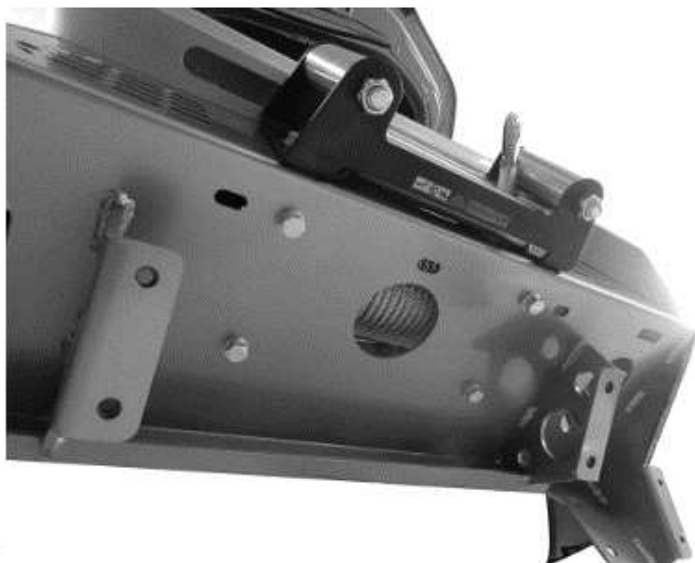
geral@afn.pt

R. da Madeira, nº 113
Z. Industrial das Travessas
3700-176 S. João da Madeira
Portugal

Tel.: (+351) 256 838 300
Fax: (+351) 256 838 305
www.afn.pt
geral@afn.pt

COORDINATES

DATUM: European 79
UTM 05.44.100
29T 45.28.300
N 40°54' 14.0"
W 08°28' 35.0"

01

- Before placing AFN bull bar, please fit your winch and accessories.

02**03**

- Remove the OEM bumper.

04



05



- Insert part number:
47001718
- Bolts needed
45000010
re use the OEM bolts.

06



- Fit part number
47006440/46006519
- Repeat the operation on the
oposit side with the part's number:
47006441/46006520

07

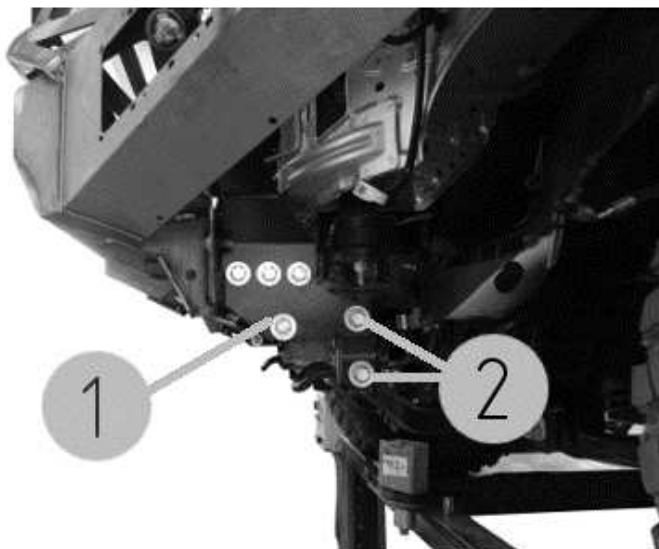
- Fit part number
47006519/46006520

08

- Bolts needed
45000084
46006522
45000036
45000066

09

- Please finger tight all the
bolts and nuts before give
the final torque

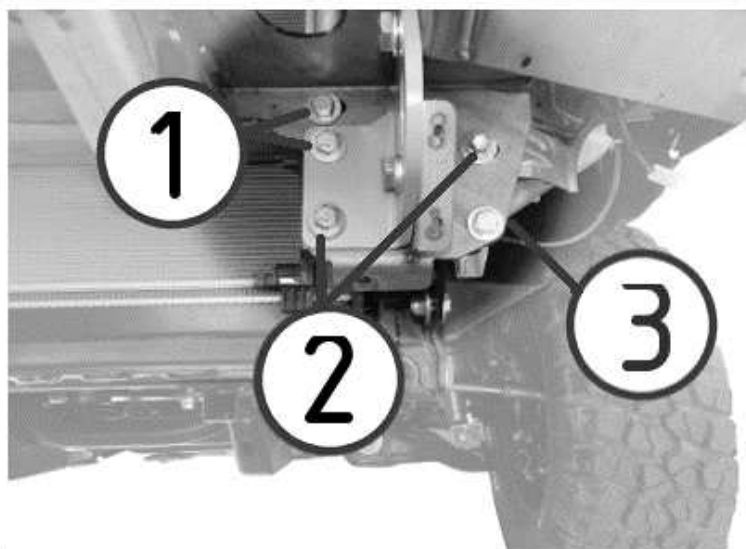
10


- 1
45000007/45000010/45000017

- 2
45000104/45000036

11

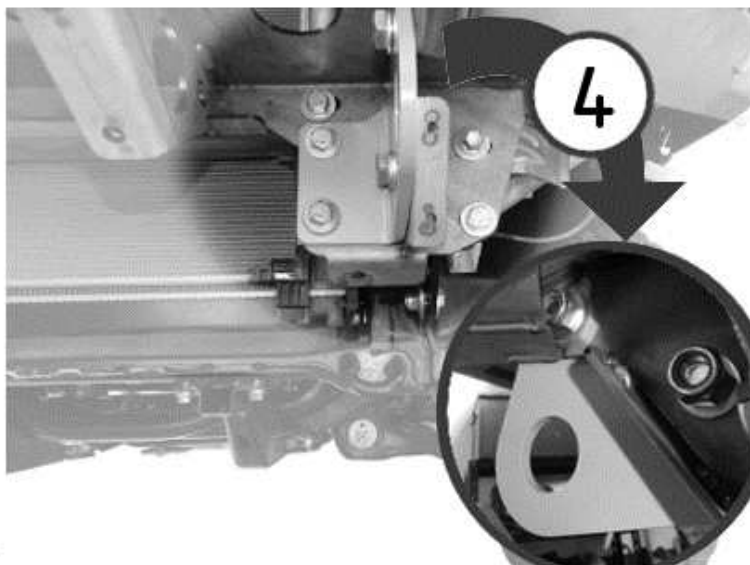

- Bolts needed
45000015/45000010/45000017

12


- 1
45000069/45000010/45000017

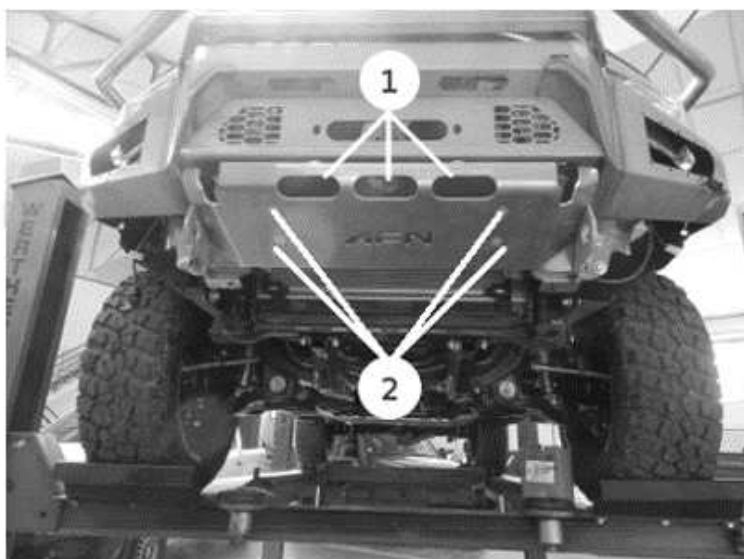
-2
OEM BOLTS with 45000010

-3
45000007/45000010/45000017

13


- Bolts needed
45000216/45000165/45000330

-Please use the right torque settings on all the bull bar bolts.
(use the table shown in the first page)

14


- Insert part number
46006439

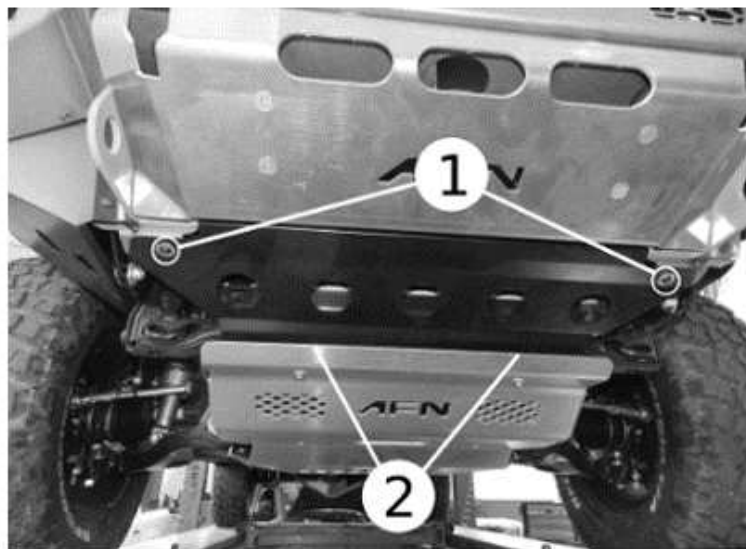
- Bolts needed
-1
45000014/45000018/45000011

-2
45000110

15


- Fit part number:
46006438/4606437

- Bolts needed
45000998

16


- Fit part number:
46006436

- Bolts needed:
-1
45000537/45000011

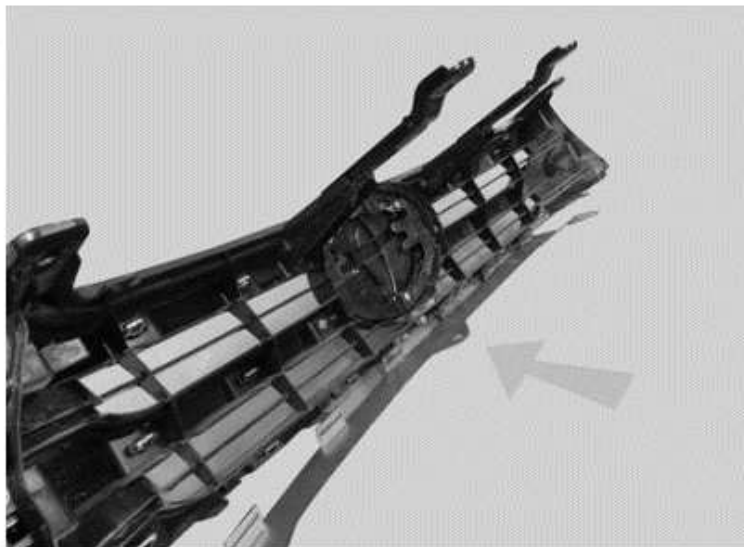
17


-2
Reuse the OEM bolts.

18


- Use the part number
46006437/46006438 to hold the
OEM wheel arch protection.

-Bolts needed
45000923/45000924

19

- Fit part number:
46006442

20

- Reuse the OEM bolts.

21