




4 X 4 A C C E S S O R I E S

Fitting Instructions

ISUZU
D-MAX

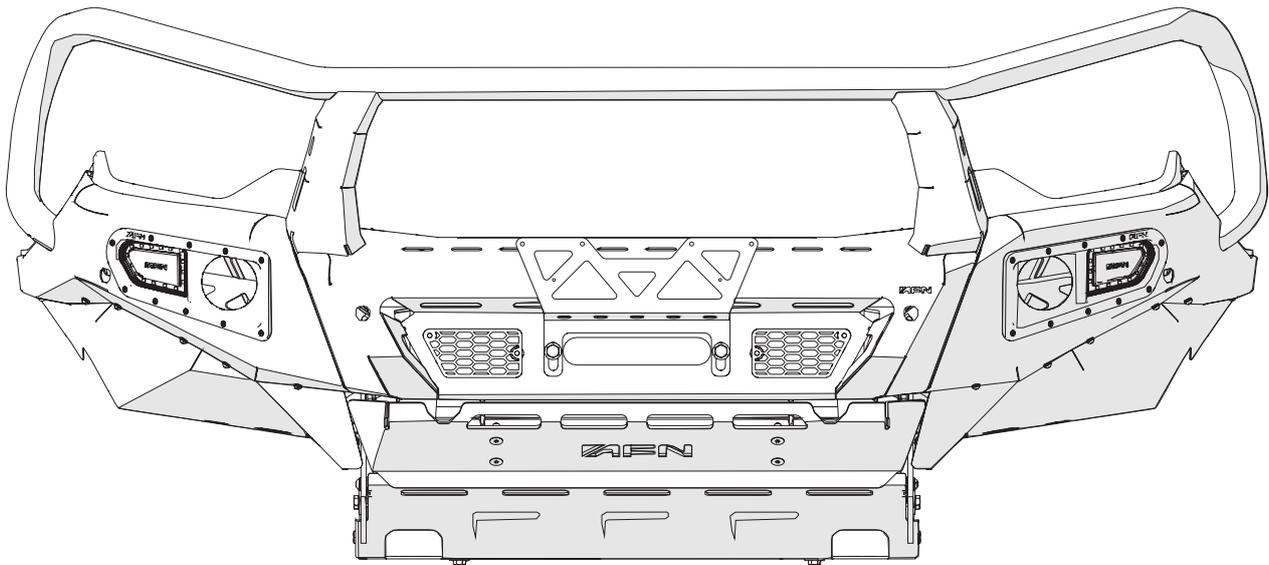

This manual contains the **Isuzu D-MAX** fitting instructions for:

Bull Bar W/ Fog Lights REF: 48002940 (2024-Present)

Front Bumper W/ Fog Lights REF: 48002941 (2024-Present)

Bull Bar w/ OEM Fog light and AFN indicator REF: 48002668 (2020-2023)

Front Bumper w/ OEM Fog light and AFN indicator REF: 48002725 (2020-2023)

Front Bumper Middle Hoop w/ OEM Fog light and AFN indicator REF: 48002725 (2020-2023)

Bull Bar w/ OEM Fog light and indicator REF: 48002771 (2020-2023)

Front Bumper w/ OEM Fog light and indicator REF: 48002772 (2020-2023)

AFN 4x4 Accessories

REF: 48002940

Bull Bar W/ Fog Lights

REF: 48002941

Front Bumper W/ Fog Lights

REF: 48002668

Bull Bar w/ OEM Fog light and AFN indicator

REF: 48002725

Front Bumper w/ OEM Fog light and AFN indicator

REF: 48002753

Front Bumper Middle Hoop w/ OEM Fog light and AFN indicator

REF: 48002771

Bull Bar w/ OEM Fog light and indicator

REF: 48002772

Front Bumper w/ OEM Fog light and indicator

Checklist

Products 48002940, 48002668, 48002725, 48002753, 48002771, 48002772

3

Fitting Instructions

5

Step 1

6

Step 2

8

Step 3

10

Step 4

11

Step 5

12

Step 6

13

Step 7

14

D-Max 2020-2023

15

Final Result

17

CHECKLIST

- In this section you have a checklist with all parts included for the installation of your AFN product
- This product should be installed as demonstrated in the product fitting instructions
- If verified that any component is damaged, please contact your nearest AFN distributor
- The specified parts will only fit in the models specified by AFN
- Do not modify any component of the product

This checklist is for product **48002940, 48002941, 48002668, 48002725, 48002753, 48002771, 48002772**

REF.: 48002940, 48002941, 48002668, 48002725, 48002753, 48002771, 48002772

NUMBER	DESCRIPTION	REFERENCE	QTY
1	Bull Bar	47002935	1x
2	Winch Mount	47002309	1x
3	Reinforcement and Recovery Point (Right Side)	47002311	1x
4	Reinforcement and Recovery Point (Left Side)	47002310	1x
5	Plate w/ Welded Nuts (Right Side)	47012313	1x
6	Plate w/ Welded Nuts (Left Side)	47002312	1x
7	Middle Reinforcement	46010008	1x

REF.: 48002940, 48002941

NUMBER	DESCRIPTION	REFERENCE	QTY
8	Bracket for Headlight Trim(Right Side)	46012345	1x
9	Bracket for Headlight Trim (Left Side)	46012344	1x
10	Corner Trim Bracket (Right Side)	46012346	1x
11	Corner Trim Bracket (Left Side)	46012343	1x
12	Headlight Trim (Right Side)	46012101	1x
13	Headlight Trim (Left Side)	46012100	1x
14	Corner Trim (Right Side)	46009719	1x
15	Corner Trim (Left Side)	46009718	1x

REF.: 48002940, 48002941, 48002668, 48002725, 48002753, 48002771, 48002772

NUMBER	DESCRIPTION	REFERENCE	QTY
16	Shims 2.5mm for Bull Bar	46009297	2x
17	Shims 4mm for Winch Mount	46008194	1x
18	Shims 2.5mm for Winch Mount	46008193	1x
19	Plate Bracket	46005518	1x
20	AFN Grill (Right Side)	47002393	1x

NUMBER	DESCRIPTION	REFERENCE	QTY
21	AFN Grill (Left Side)	47002392	1x
22	Wing (Right Side)	47002315	1x
23	Wing (Left Side)	47002314	1x
24	Front Skid Plate	46009289	6x
25	Auxiliary Skid Plate	47002398	1x
26	Bolt M12x20	45001565	6x
27	Bolt M12x30	45001027	2x
28	Washer M12	45000995	4x
29	Washer M12 (Big)	45001250	6x
30	Nylock Nut M12	45001033	2x
31	Bolt M8x25	45001537	2x
32	Washer M8 (Big)	45001267	4x
33	Nylock Nut M8	45001521	2x
34	Bolt M6x20	45000387	4x
35	Washer M6	45001256	4x
36	Nylock Nut M6	45001522	4x
37	Bolt M4x12	45001232	12x
38	Flange Nut M4	45001166	12x
39	Bolt M10x30	45000934	4x
40	Rubber Nut	45001269	4x
41	Blade Clamp for Chassis Rails	46009295	2x
42	Reinforcement Plate for Headlights	46009975	2x
43	Washer Plate	46009303	2x
44	Shims 4mm for Bull Bar	46009296	2x
45	Bolt M6x20	45001829	2x
46	Bolt M12x90	45000084	2x
47	Washer	45001250	16x
48	Nut M12	45001710	8x
49	Bolt M12x40	45001544	4x
50	Bolt M12x30	45001565	2x

CHECKLIST

**REF.: 48002668, 48002725, 48002753,
48002771, 48002772**

NUMBER	DESCRIPTION	REFERENCE	QTY
51	Bolt M10x35x1.25	45001621	6x
52	Bolt M10x35	45001553	6x
53	Washer M10 (Big)	45001251	10x
54	Washer M10	45001254	10x
55	Nylock Nut M10	45001554	2x
56	Bolt M10x30	45001103	2x
57	Nut M10	45001829	4x
58	Bolt M8x25	45001537	2x
59	Washer M8	45001255	4x
60	Nylock Nut M10	45001521	2x
61	Bolt M6x16	45001016	8x
62	Bolt M6x20	45000998	16x
63	Washer M6	45000979	12x
64	Washer M6	45000050	16x
65	Washer M6 (Big)	45000044	2x
66	Rubber Washer M6	45001802	12x
67	Pressure Washer M6	45000170	2x
68	Nut M6	45000057	2x
69	Nylock Nut M6	45000074	8x
70	Bolt M3.5x16	45001123	14x
71	Cage Nut M6	45001012	16x
72	Rubber Nut	45001113	14x
73	Bolt M6x30	45000114	1x
83	Bracket for Headlight Trim(Right Side)	46012650	1x
84	Bracket for Headlight Trim (Left Side)	46012651	1x
85	Bracket for Headlight Trim(Right Side)	46012653	1x
86	Bracket for Headlight Trim (Left Side)	46012652	1x

NUMBER	DESCRIPTION	REFERENCE	QTY
74	Bracket for Headlight Trim(Right Side)	46012345	1x
75	Bracket for Headlight Trim (Left Side)	46012344	1x
76	Corner Trim Bracket (Right Side)	46012346	1x
77	Corner Trim Bracket (Left Side)	46012343	1x
78	Corner Trim Bracket	46009975	2x
79	Headlight Trim (Right Side)	46012101	1x
80	Headlight Trim (Left Side)	46012100	1x
81	Corner Trim (Right Side)	46009719	1x
82	Corner Trim (Left Side)	46009718	1x

FITTING INSTRUCTIONS

WARNING:

Before you begin installation, read all instructions thoroughly.
 Proper tools will improve the quality of installation and reduce the time required.


- This product should be installed as demonstrated in the *Product «Fitting Instructions»*;
- The specified parts, will only fit the models specified by **AFN**;
- Do not modify any component of the product;
- It is recommended that this product is installed by specialized and trained personnel;
- AFN doesn't take responsibility for changes made in the vehicle by its manufacturer;
- Work safely and use specialized tools at all times;
- **Always use protective gear.**




Size	Torque Nm	Torque lbft
M6	9Nm	7lbft
M8	22Nm	16lbft
M10	44Nm	32lbft
M12	77Nm	57lbft

Mouting Time

- 4 Hours
- 2 Persons (recommended)

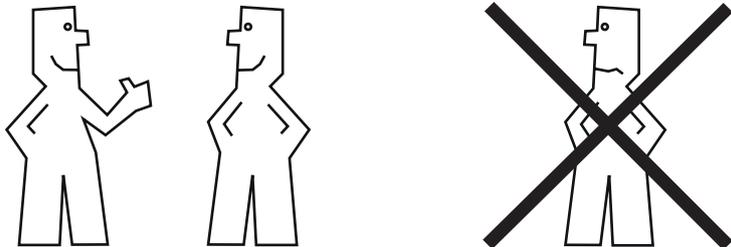



Tools Required

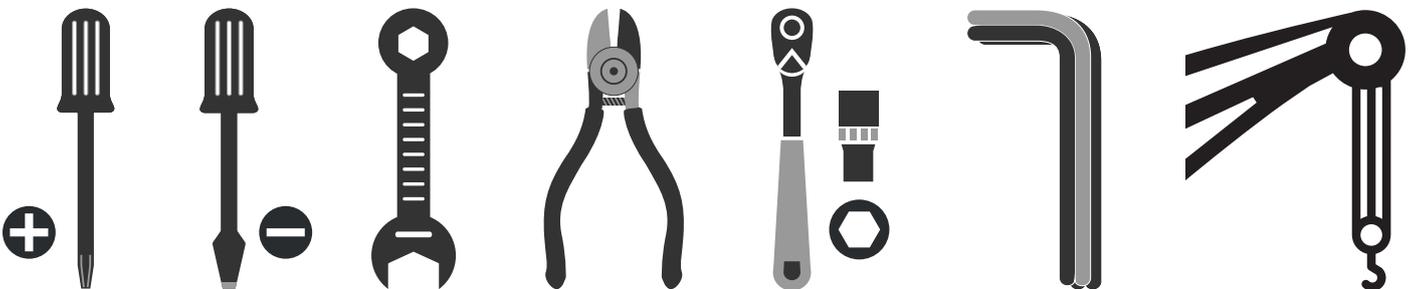





- Screwdriver star head
- Screwdriver flat head
- Wrench
- Wire cutter
- Ratchet wrench
- Allen wrench
- Crane

Step 1

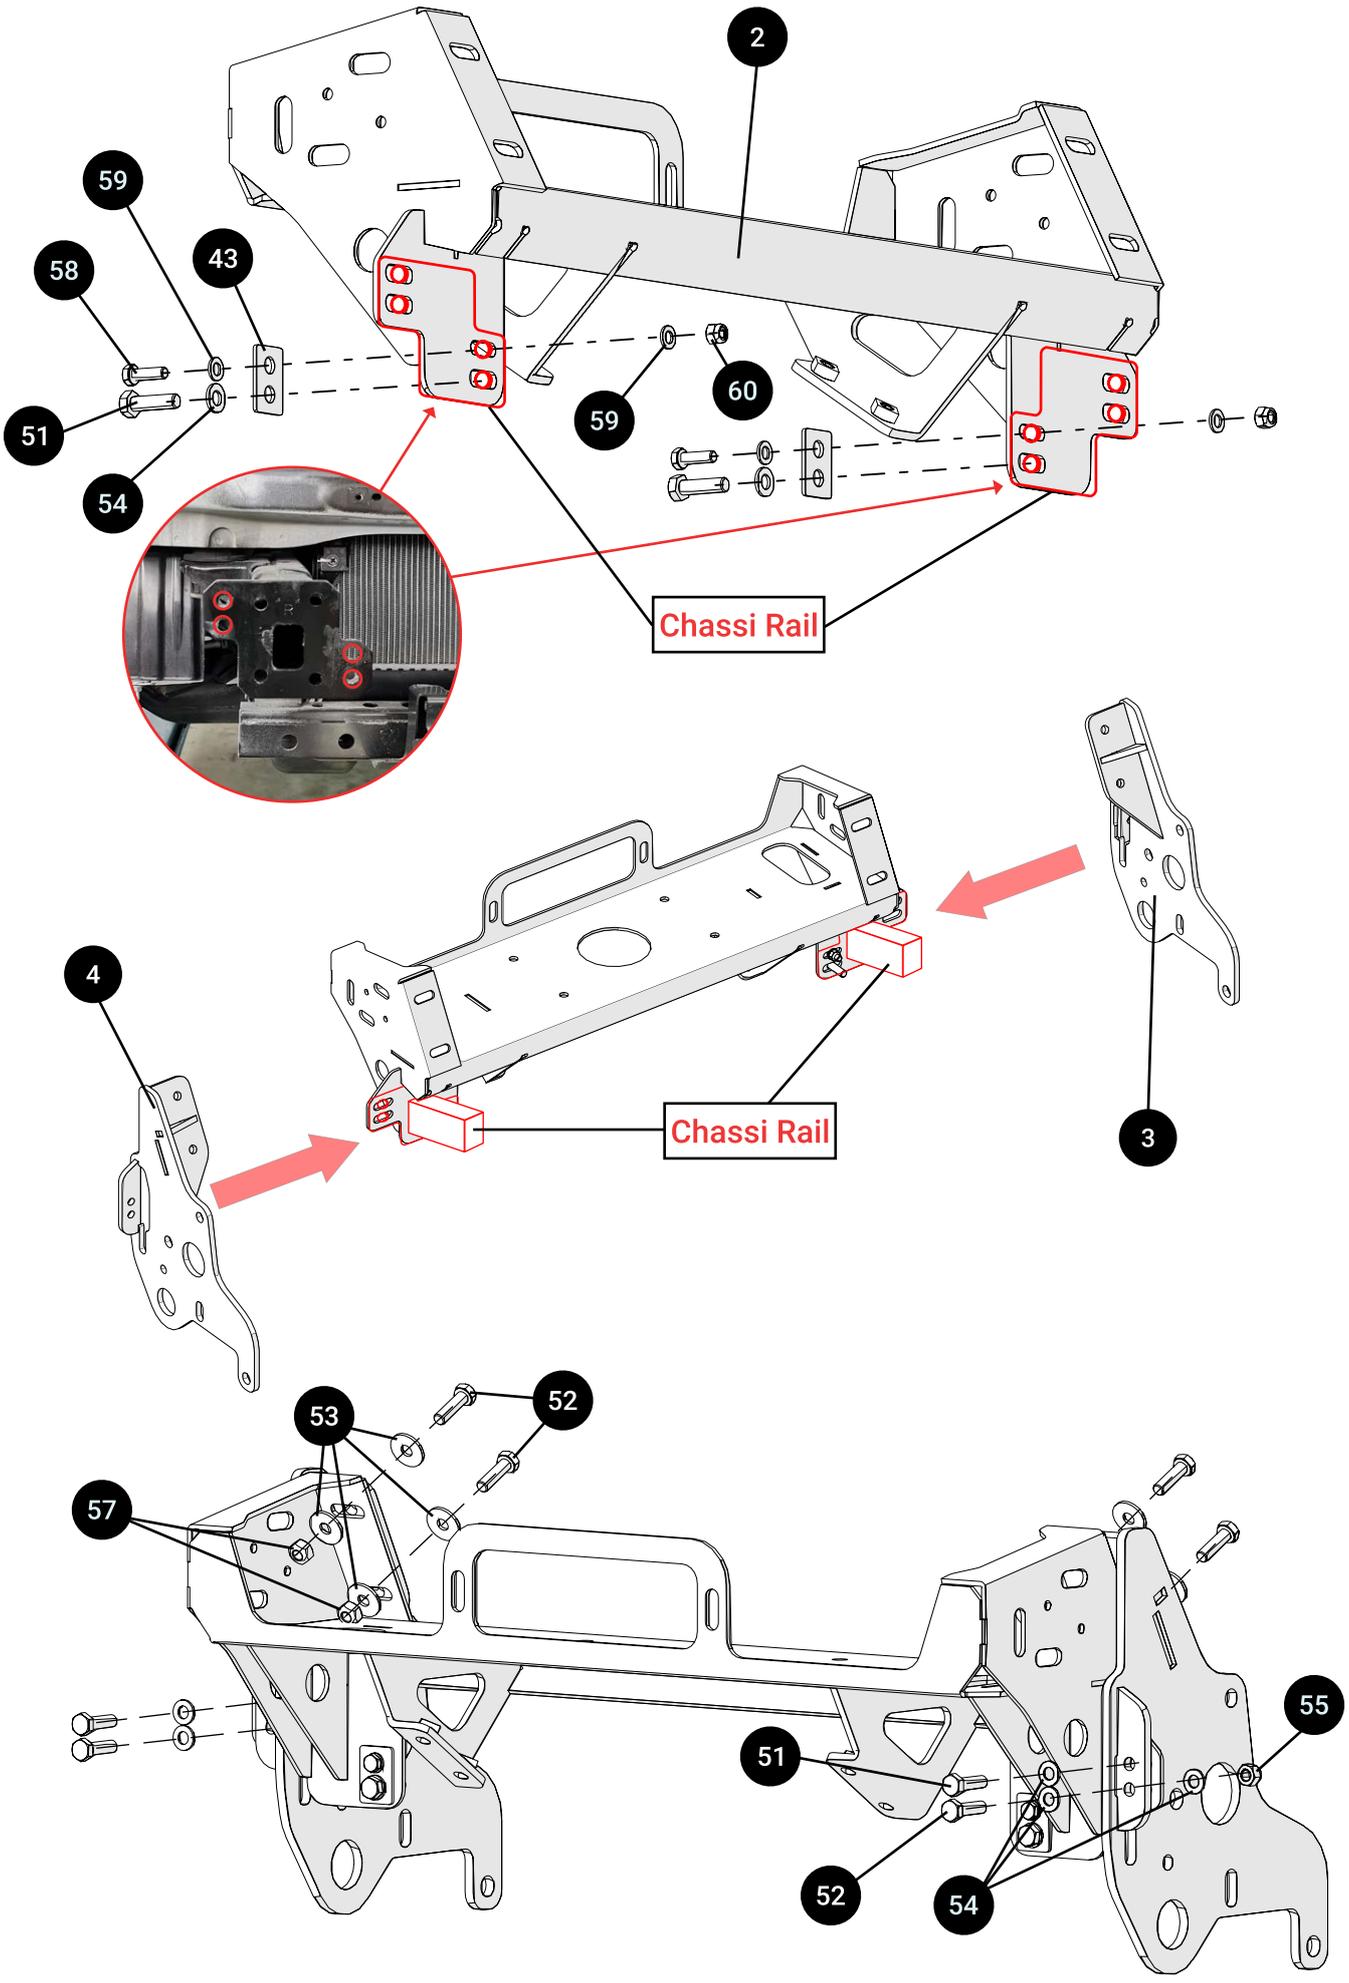


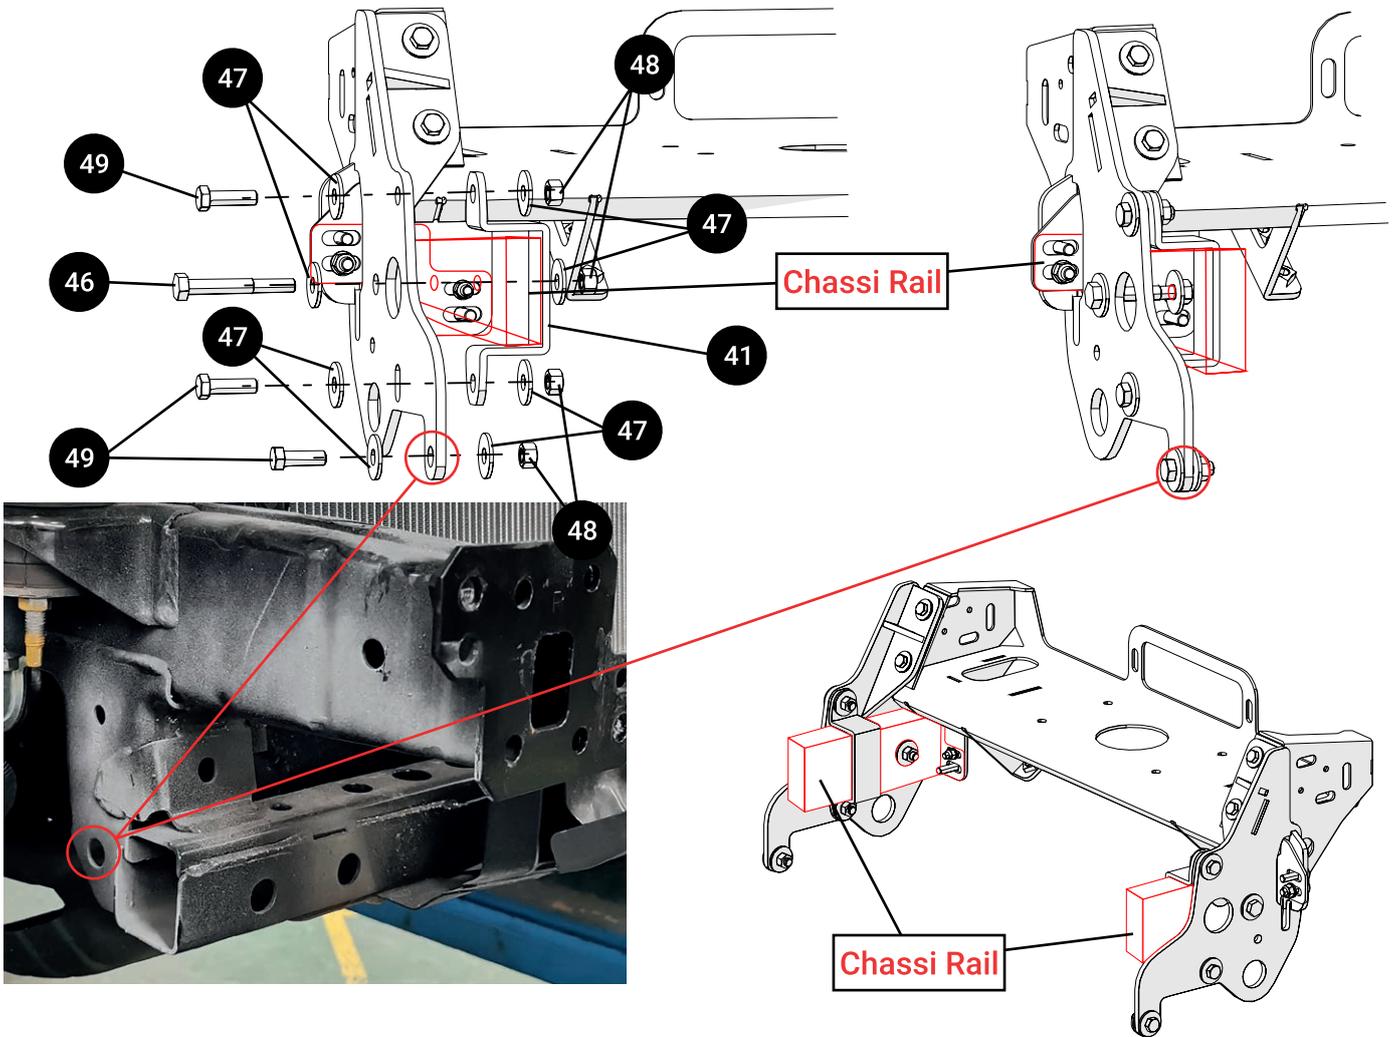


Parts Needed:

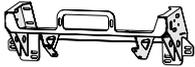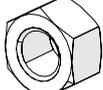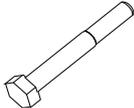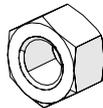- | | | | | | |
|--------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| <p>2</p>  <p>x1 47002309
Winch Mount</p> | <p>3</p>  <p>x1 47002311
Recovery Point (Right)</p> | <p>4</p>  <p>x1 47002310
Recovery Point (Left)</p> | <p>58</p>  <p>x2 45001537
Bolt M8x25</p> | <p>51</p>  <p>x4 45001621
Bolt M10x35x1.25</p> | <p>59</p>  <p>x4 45001255
Washer M8</p> |
| <p>43</p>  <p>x2 46009303
Washer Plate</p> | <p>54</p>  <p>x8 47001254
Washer M10</p> | <p>60</p>  <p>x2 45001521
Nylock Nut M10</p> | <p>52</p>  <p>x6 45001553
Bolt M10x35</p> | <p>53</p>  <p>x8 45001251
Washer M10 (Big)</p> | <p>57</p>  <p>x4 45001829
Lock Nut M10</p> |
| <p>55</p>  <p>x2 45001554
Nylock Nut M10</p> | <p>41</p>  <p>x2 46009295
Blade Clamps for Chassis Rails</p> | <p>46</p>  <p>x2 45000084
Bolt M12x90</p> | <p>47</p>  <p>x16 45001250
Washer M12 (Big)</p> | <p>48</p>  <p>x8 45001710
Lock Nut M12</p> | <p>49</p>  <p>x6 45001544
Bolt M12x40</p> |

Step 2



Step 2 only is for reference **48002940** or **48002941**. If you have some of these references, **48002668**, **48002725**, **48002771**, **48002772** or **48002753** go to page **D-Max 2020-2023** (pages 15 and 16), when you finish go to **Step 3** (page 10).

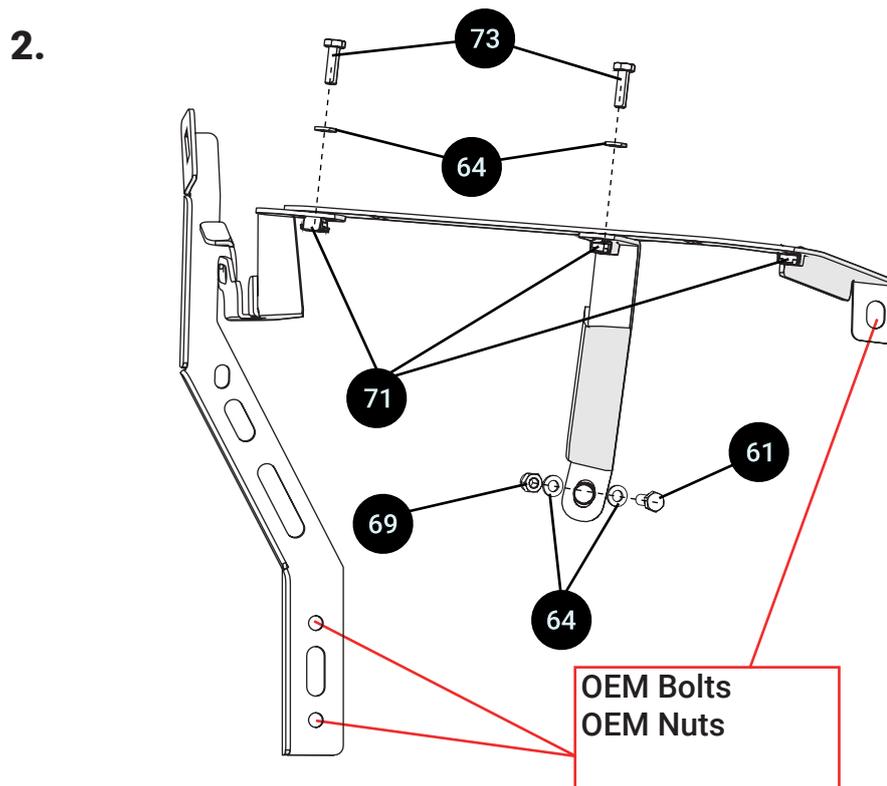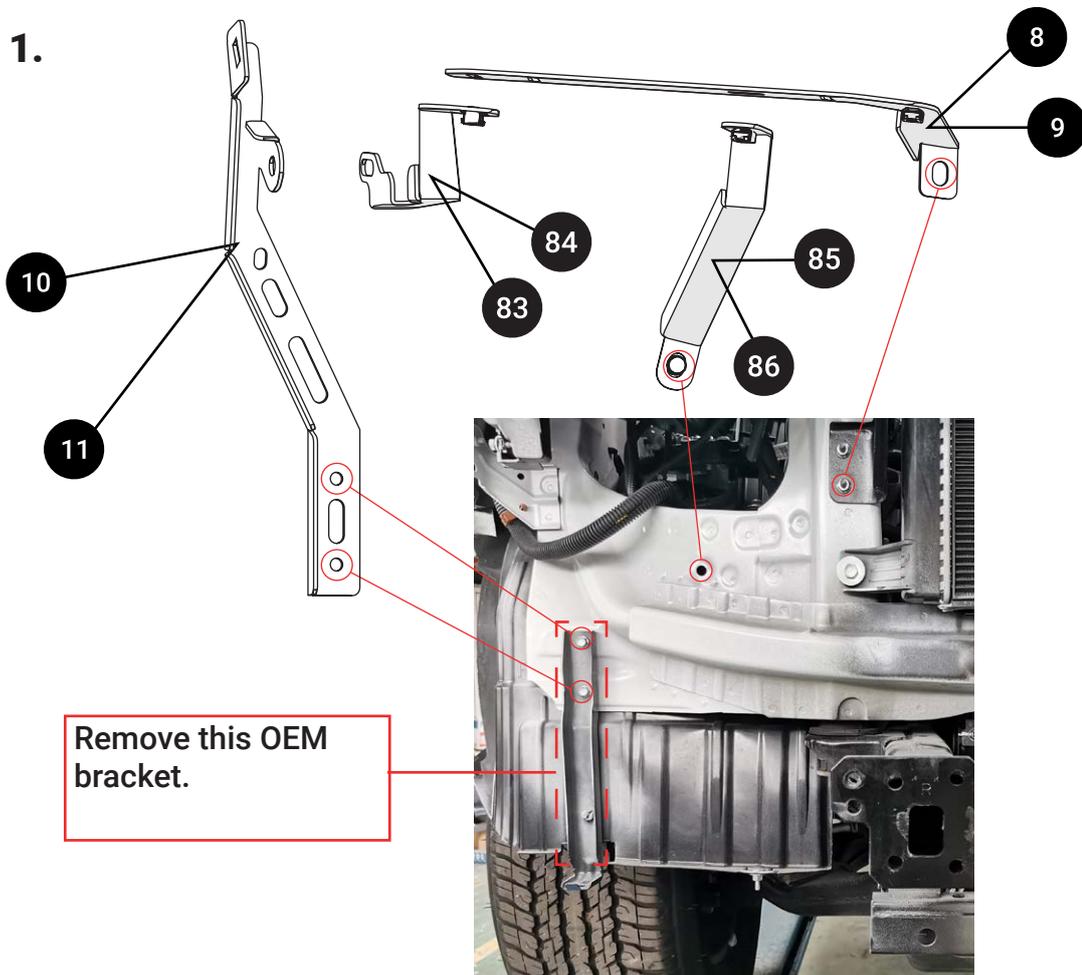

3.






4.

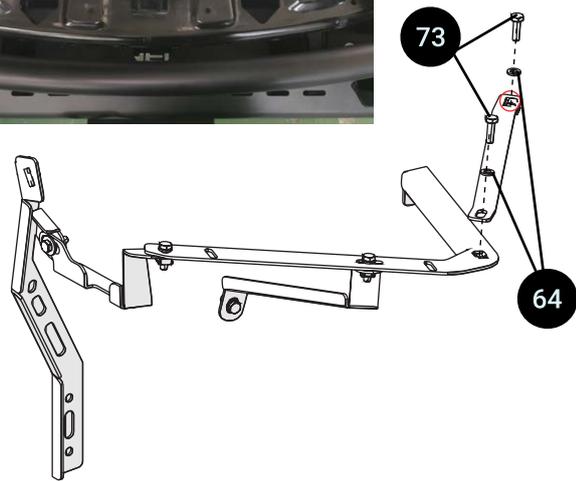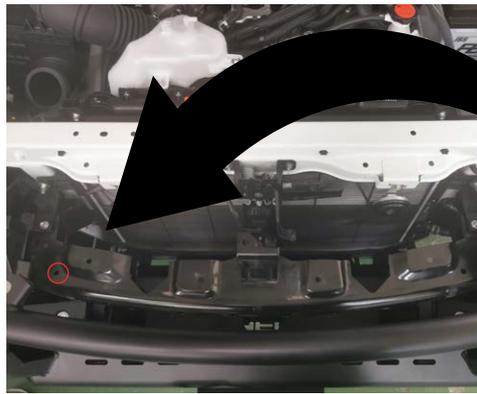

5.

FRONT

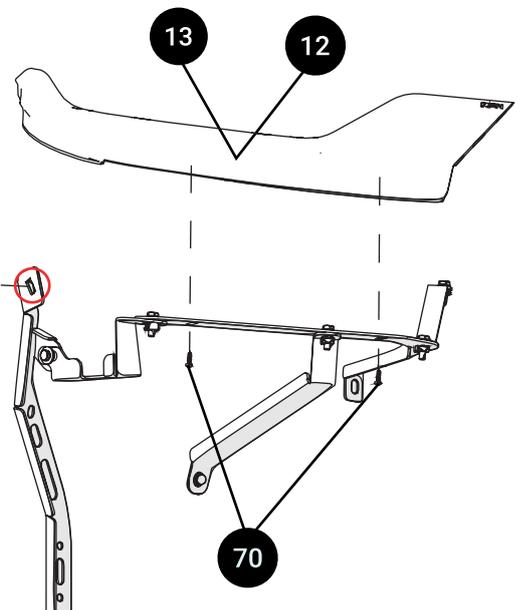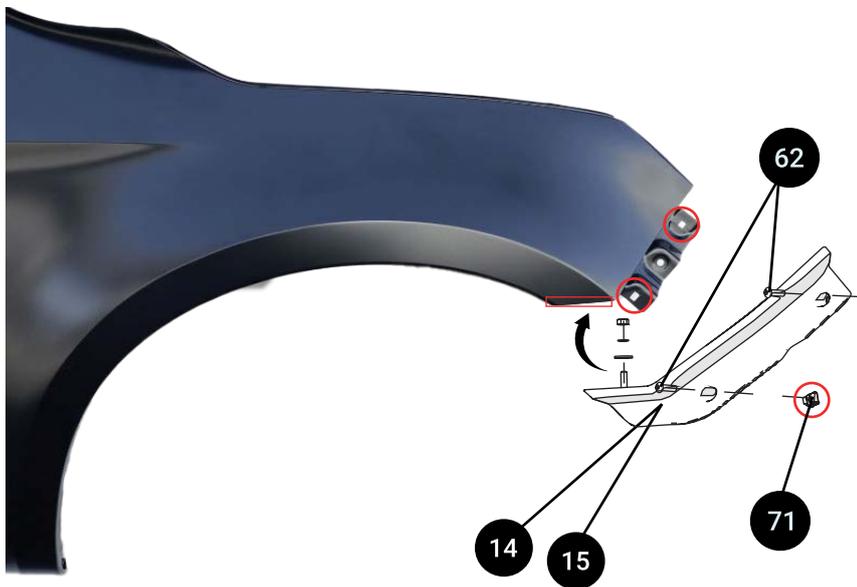


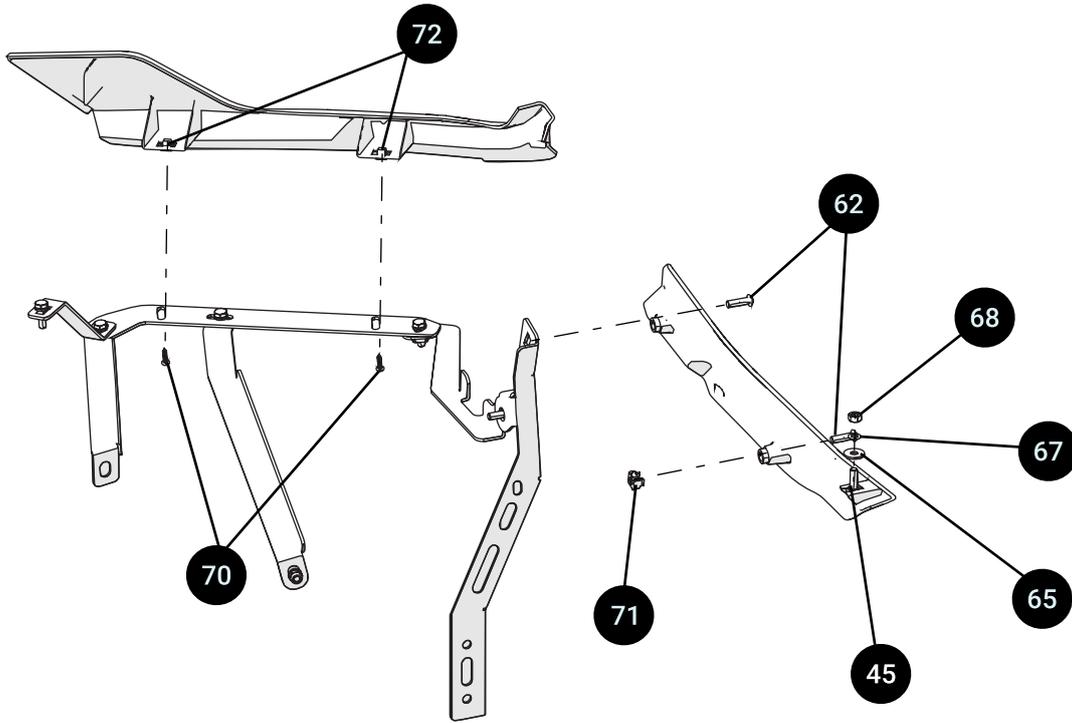


Parts Needed:

- | | | | | | |
|---------------------------------------------------------------------------------|--------------------------------------------------------------------------------|--------------------------------------------------------------------------|-------------------------------------------------------------------------|---------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| <p>8</p> <p>x1 46012345
Bracket for Headlight Trim (Right Side)</p> | <p>9</p> <p>x1 46012344
Bracket for Headlight Trim (Left Side)</p> | <p>10</p> <p>x1 46012346
Corner Trim Bracket (Right Side)</p> | <p>11</p> <p>x1 46012343
Corner Trim Bracket (Left Side)</p> | <p>83</p> <p>x1 46012650
Bracket for Headlight Trim (Right Side)</p> | <p>84</p> <p>x1 4601251
Bracket for Headlight Trim (Left Side)</p> |
| <p>85</p> <p>x1 46012653
Bracket for Headlight Trim (Right Side)</p> | <p>86</p> <p>x1 46012652
Bracket for Headlight Trim (Left Side)</p> | <p>12</p> <p>x1 46012101
Headlight Trim (Right Side)</p> | <p>13</p> <p>x1 46012100
Headlight Trim (Left Side)</p> | <p>14</p> <p>x1 46009719
Corner Trim (Right Side)</p> | <p>15</p> <p>x1 46009718
Corner Trim (Left Side)</p> |
| <p>61</p> <p>x2 45001016
Bolt M6x16</p> | <p>64</p> <p>x12 45000050
Washer M6</p> | <p>69</p> <p>x2 45000074
Nylock Nut M6</p> | <p>73</p> <p>x10 45000043
Bolt M6x20</p> | <p>70</p> <p>x4 45001123
Bolt M3.5x16</p> | <p>72</p> <p>x4 45000113
Rubber Nut M3.5</p> |
| <p>62</p> <p>x4 45000998
Bolt M6x20</p> | <p>71</p> <p>x10 45001012
Cage Nut M6</p> | <p>45</p> <p>x2 45001829
Bolt M6x20</p> | <p>65</p> <p>x4 45000044
Washer M6 (Big)</p> | <p>67</p> <p>x2 45000170
Pressure Washer M6</p> | <p>68</p> <p>x2 45000057
Lock Nut M6</p> |


Step 3

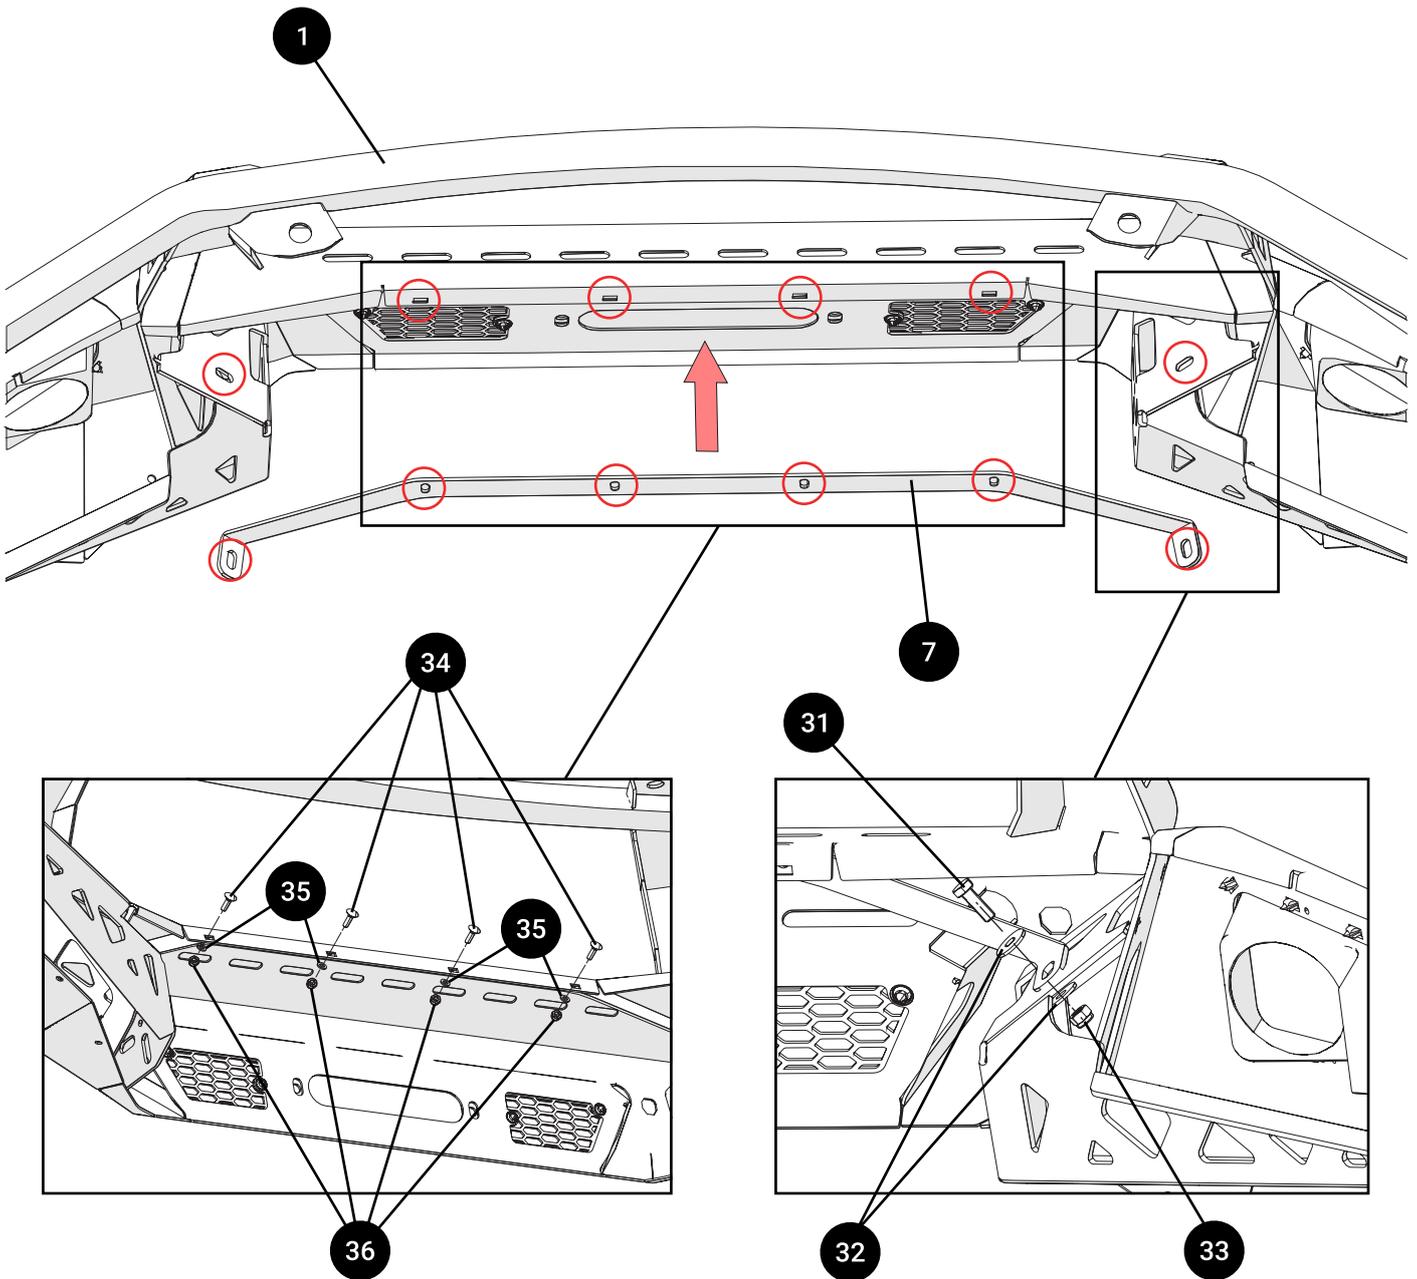


Parts Needed:

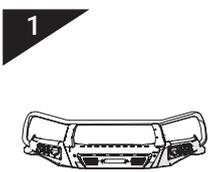


x1 47002935
Bull Bar

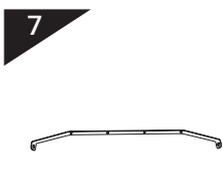


x1 46010008
Middle Reinforce-
ment

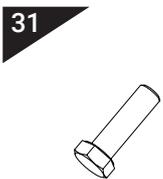


x2 45001537
Bolt M8x25

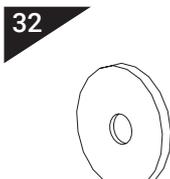


x4 45001267
Washer M8 (Big)

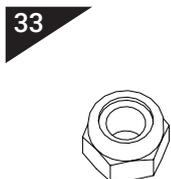


x2 45001521
Nylock Nut M8

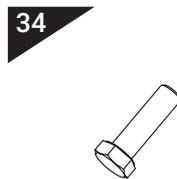

x4 45000387
Bolt M6x20

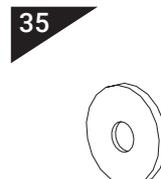


x4 45001256
Washer M6

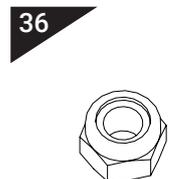

x4 45001522
Nylock Nut M6


Step 4

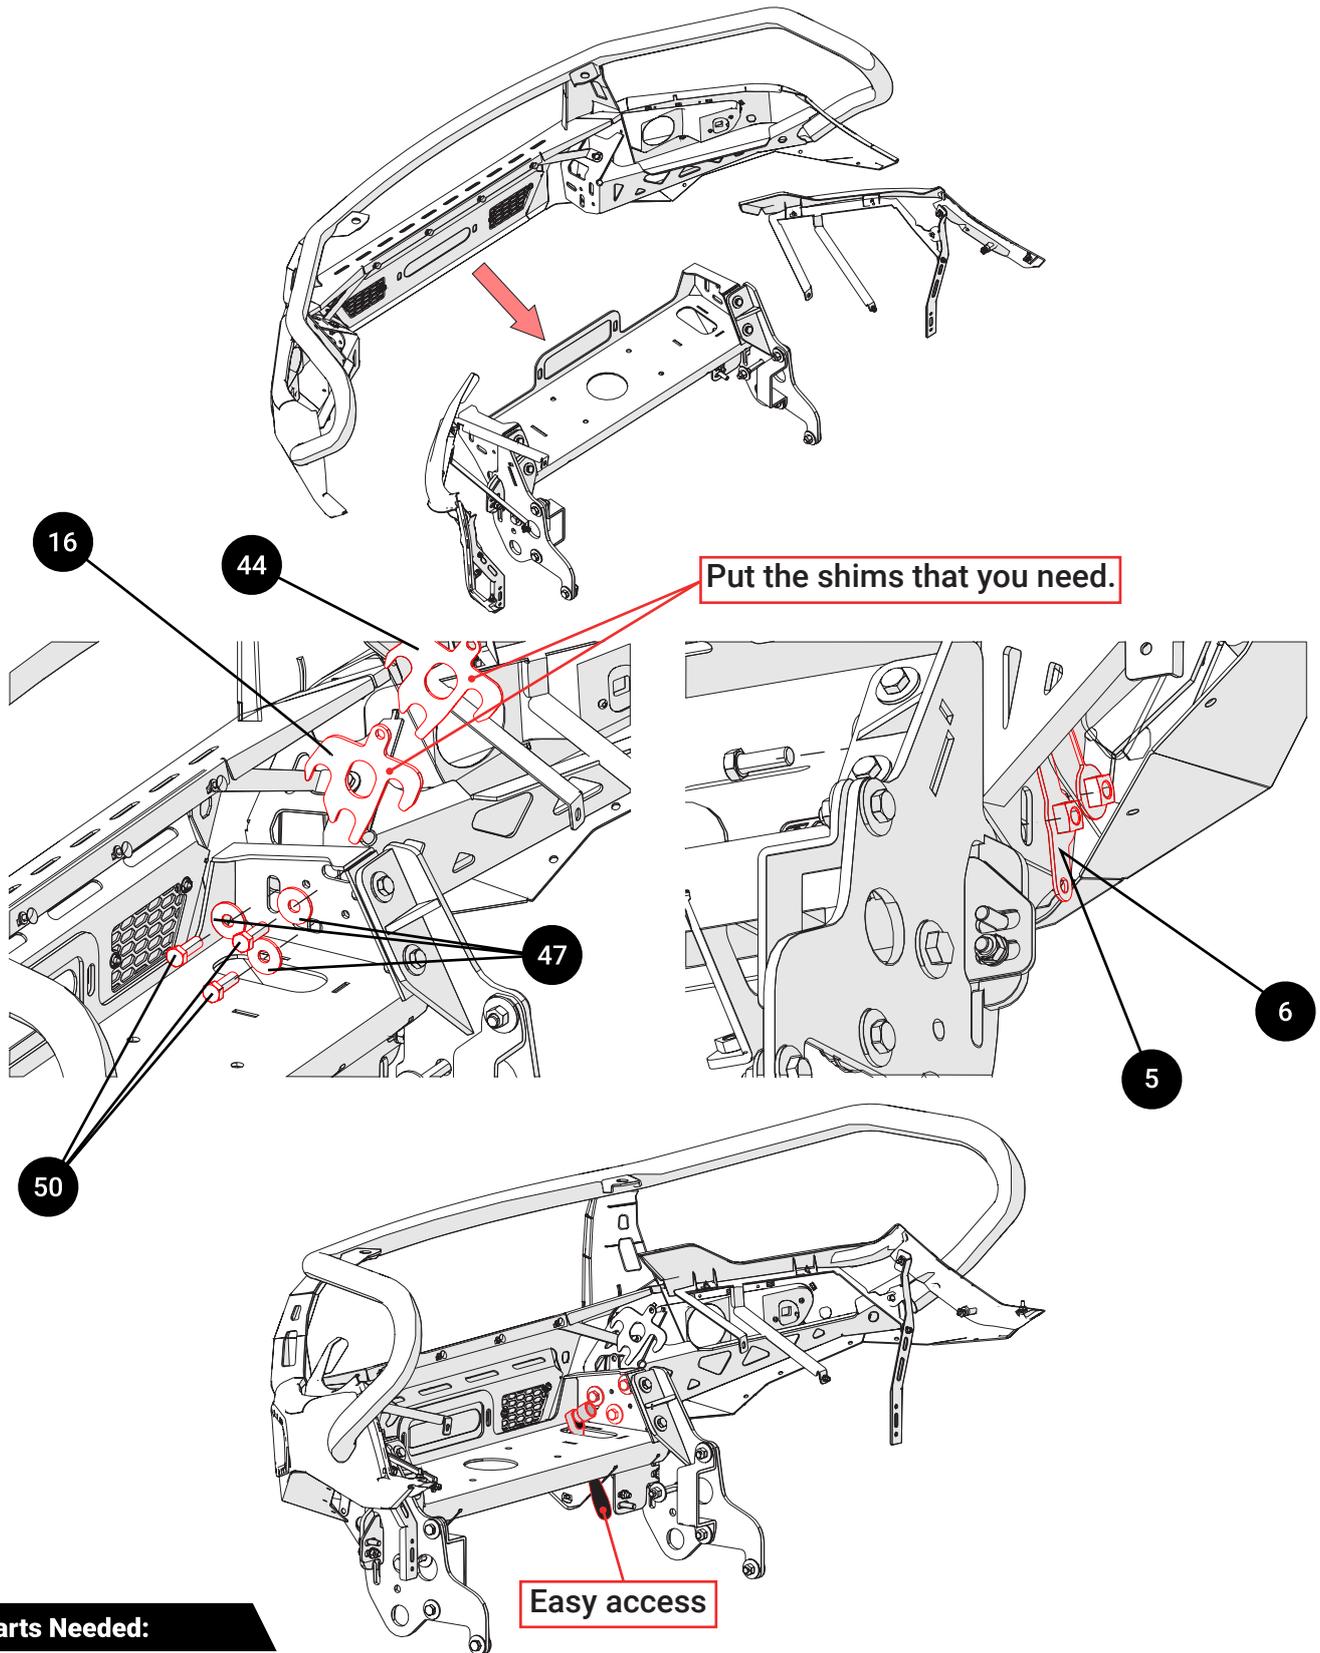



Parts Needed:

- | | | | | | |
|-----------------------------------------------------|----------------------------------------------------|--------------------------------------------|------------------------------------------|----------------------------|---------------------------|
|
5 |
6 |
16 |
44 |
50 |
47 |
| x1 45001537
Plate w/ Welded
Nuts (Right Side) | x1 45001267
Plate w/ Welded
Nuts (Left Side) | x2 45001521
Shims 2.5mm for
Bull Bar | x2 45000387
Shims 4mm for Bull
Bar | x6 45001565
Bolt M12x30 | x6 45001250
Washer M12 |

Step 5

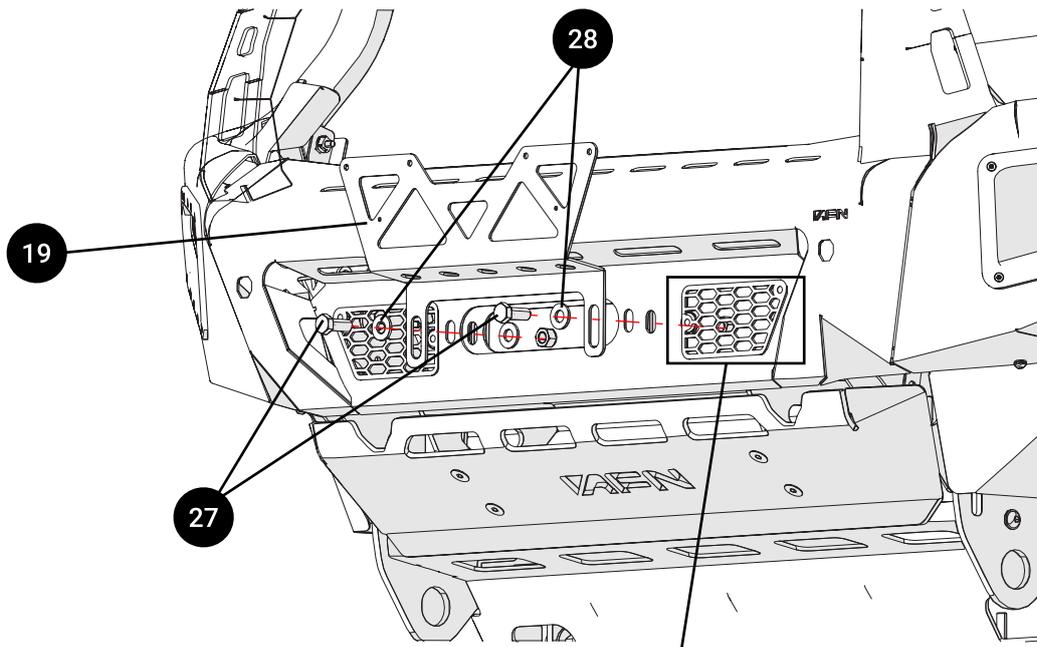


Remove grill to make it easier to place shim.

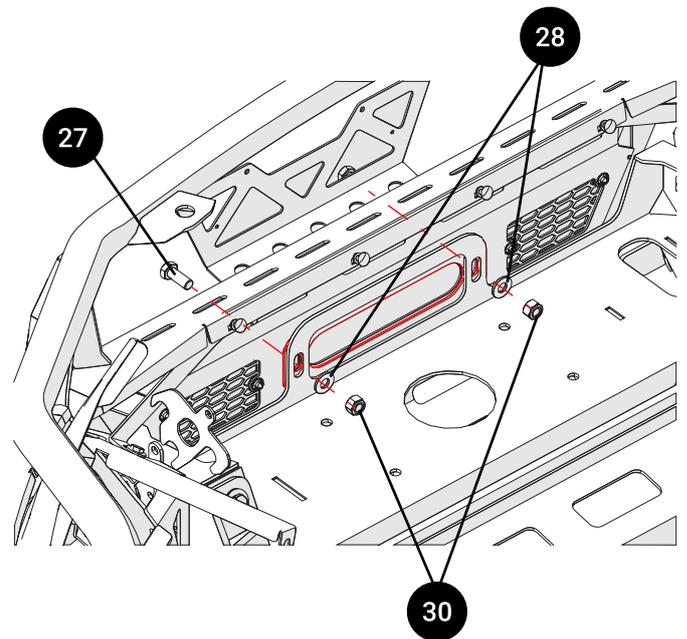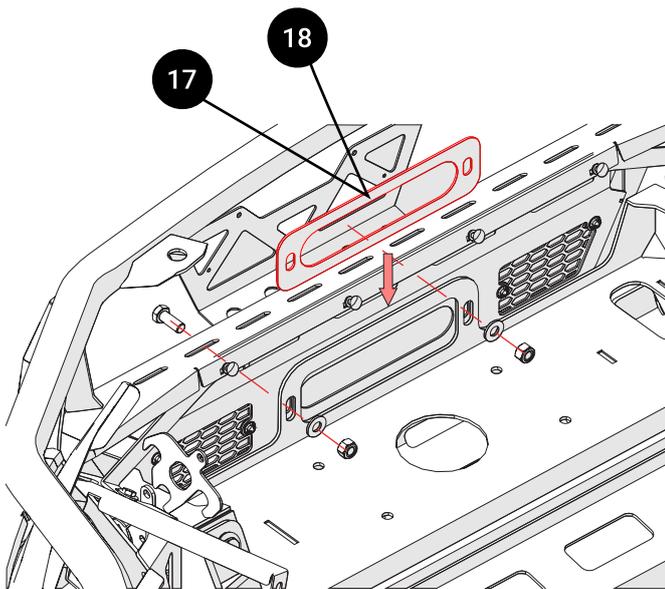

Parts Needed:

19

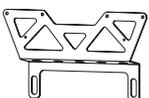

x1 47002398
Plate Bracket

27



x2 45000934
Bolt M12x30

28




x4 45001103
Washer M12

30




x2 45001254
Nylock Nut M12

17

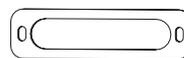



x1 46008194
Shims 4mm for
Winch Mount

18

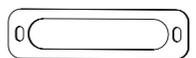


x1 46008193
Shims 2.5mm for
Winch Mount


Step 6

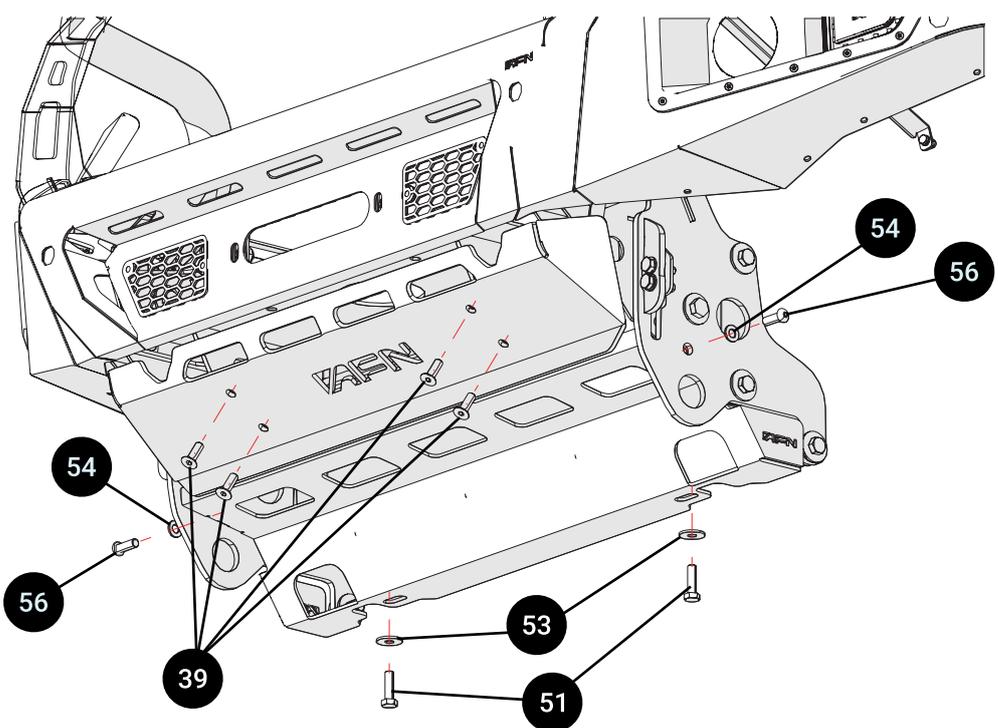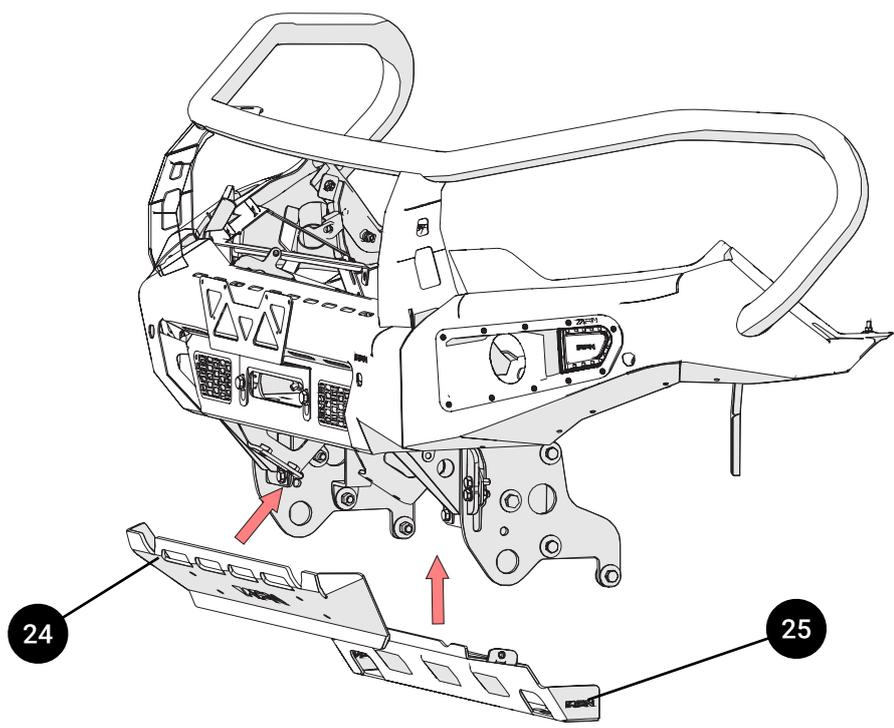


Parts Needed:

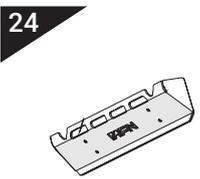


x1 46009289
Front Skid Plate

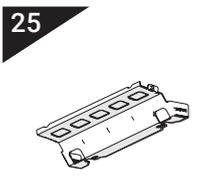


x1 47002398
Auxiliary Skid Plate

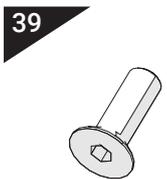


x4 45000934
Bolt M10x30

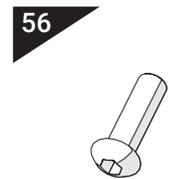


x2 45001103
Bolt M10x30

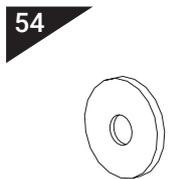

x2 45001254
Washer M10



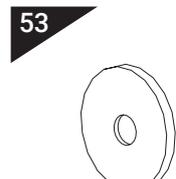


x2 45001251
Washer M10 (Big)

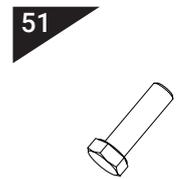

x2 45001621
Bolt M10x35x1.25

Step 7

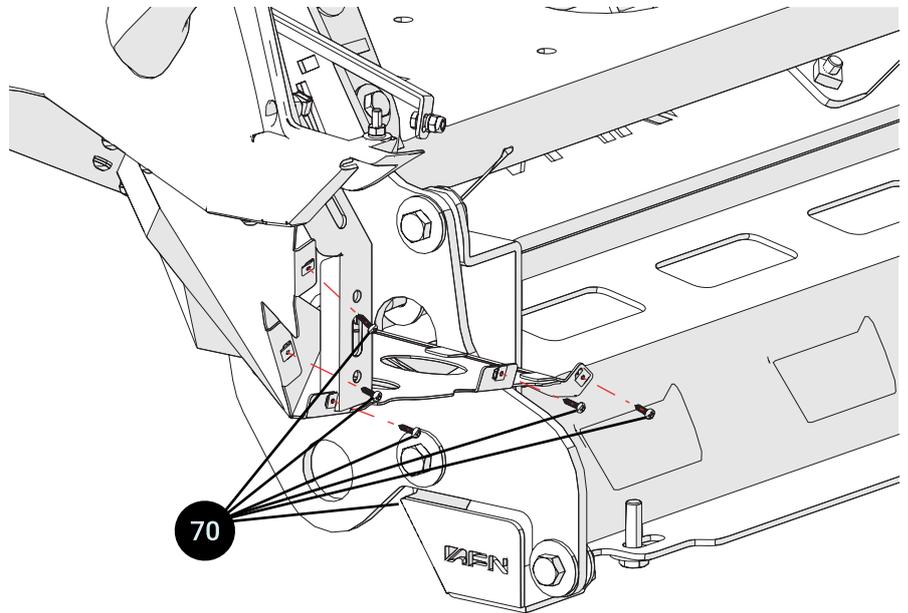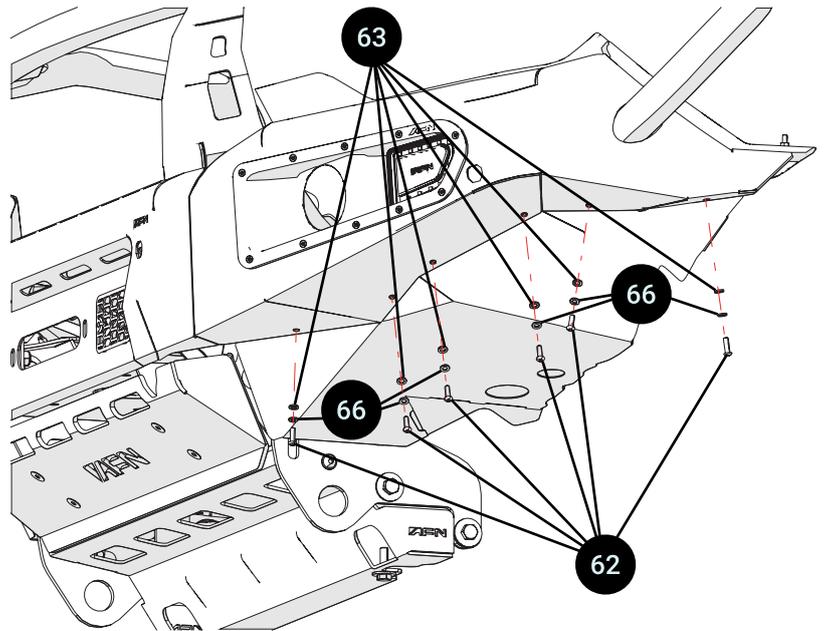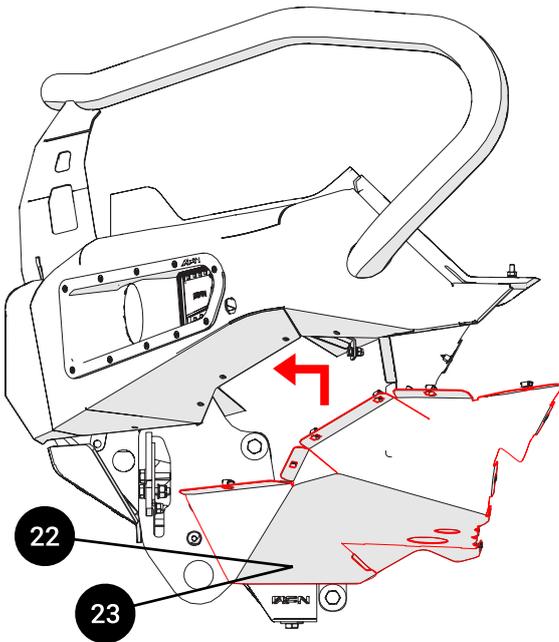

WARNING






Move the OEM plastic fender against the wing(22,23), mark the cut line and cut off the excess OEM plastic fender.

Still with the OEM plastic fender against the wing(22,23), drill a hole with a diameter of 7mm in the same place where the holes in the wing are. Then use the bolts(70) to screw into the holes.




Parts Needed:





- | | | | | | |
|----------------------------------|---------------------------------|----------------------------|----------------------------|----------------------------------|------------------------------|
| 22 | 23 | 62 | 63 | 66 | 70 |
| | | | | | |
| x1 47002315
Wing (Right Side) | x1 47002314
Wing (Left Side) | x12 45000998
Bolt M6x20 | x12 45000979
Washer M10 | x12 45001802
Rubber Washer M6 | x10 45001123
Bolt M3.5x16 |

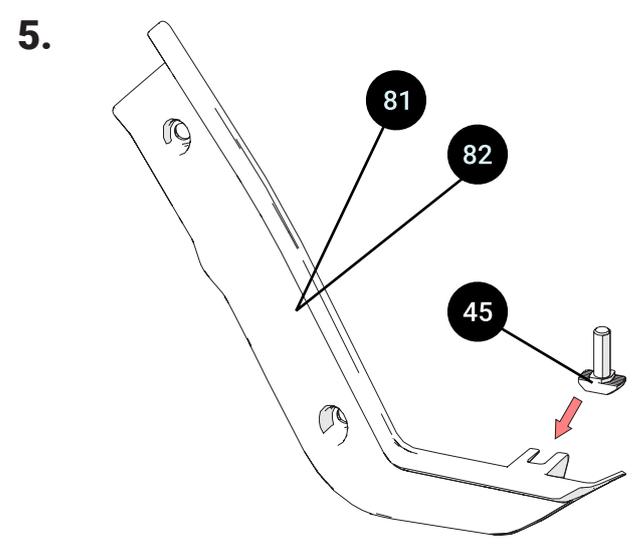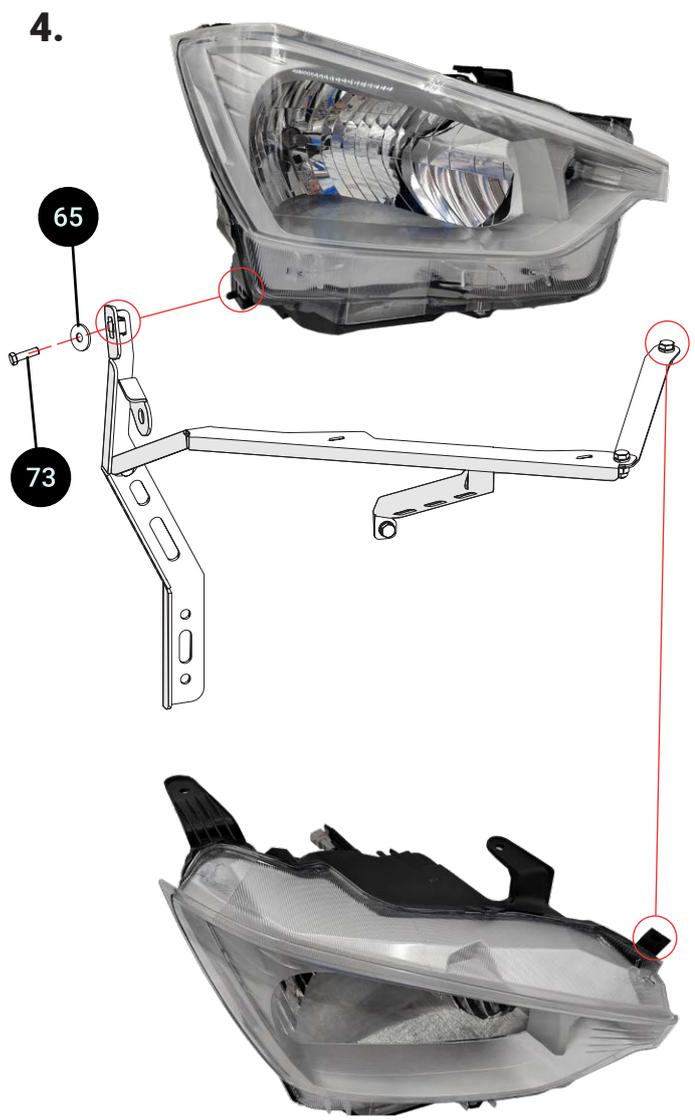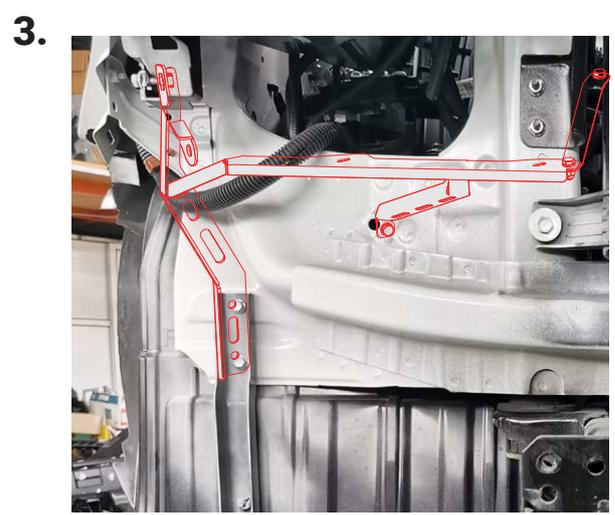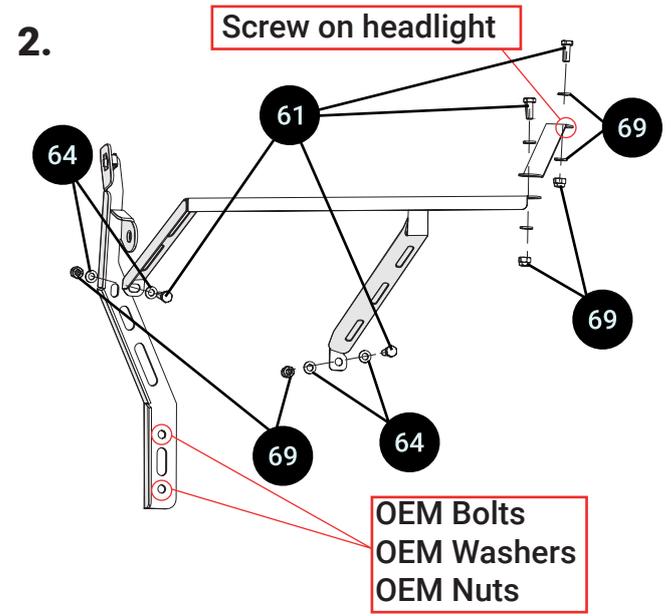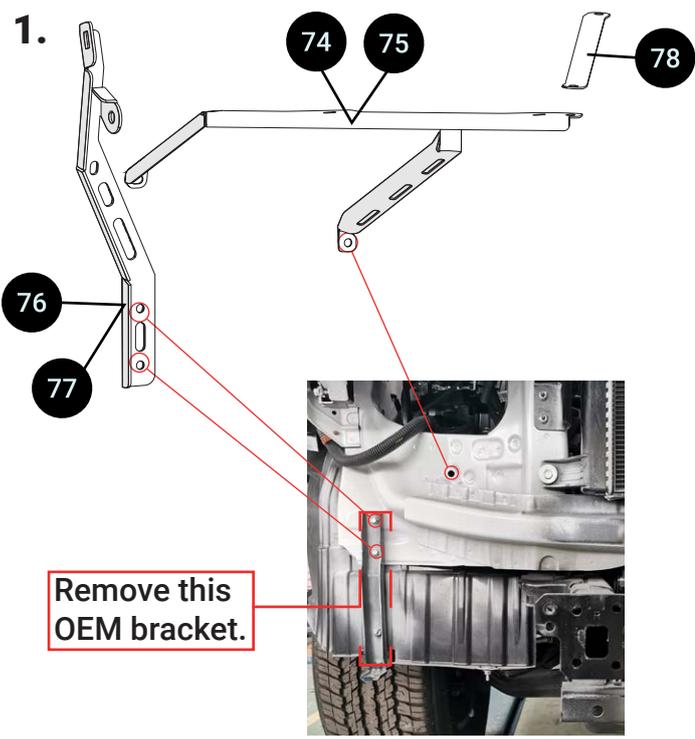

6.

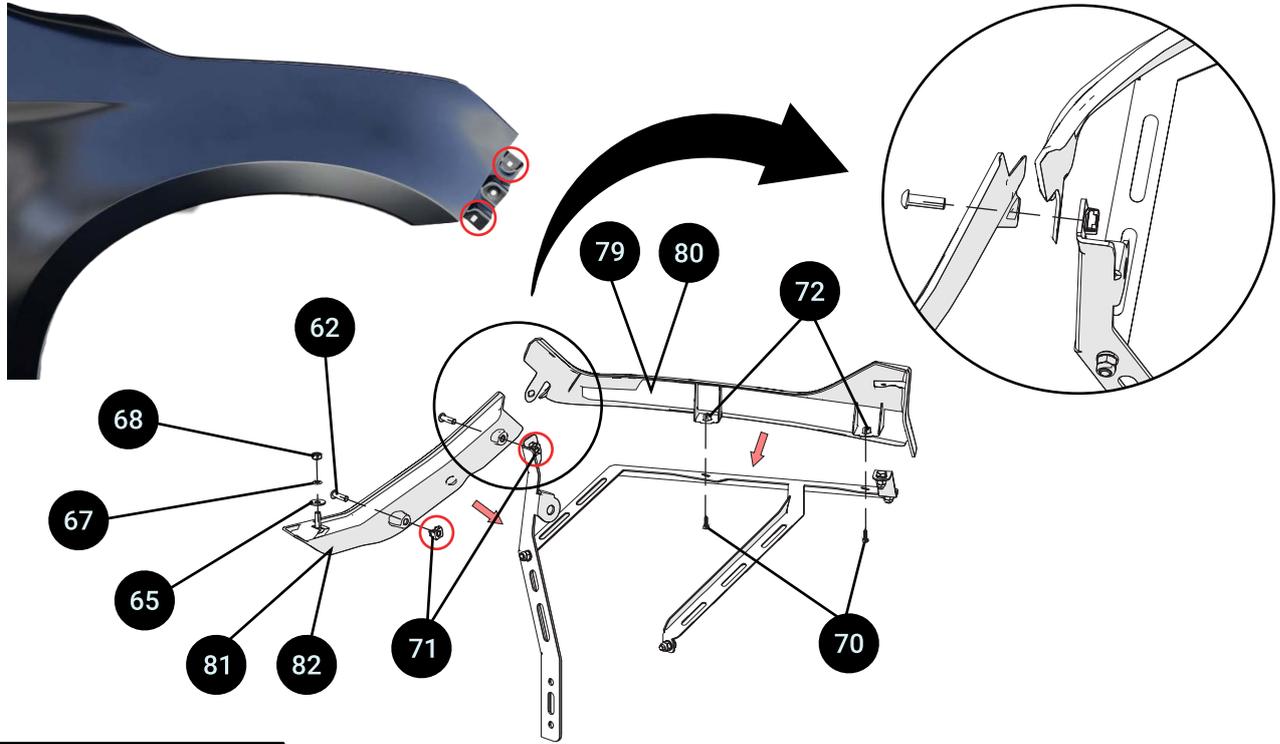

Parts Needed:

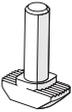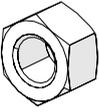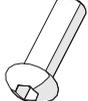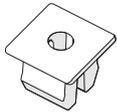- | | | | | | |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>74</p>  <p>x1 46009721
Bracket for Headlight Trim (Right Side)</p> | <p>75</p>  <p>x1 46009720
Bracket for Headlight Trim (Left Side)</p> | <p>76</p>  <p>x1 46009724
Corner Trim Bracket (Right Side)</p> | <p>77</p>  <p>x1 46009723
Corner Trim Bracket (Left Side)</p> | <p>78</p>  <p>x2 46009975
Corner Trim Bracket</p> | <p>79</p>  <p>x1 46012101
Headlight Trim (Right Side)</p> |
| <p>80</p>  <p>x1 46012100
Headlight Trim (Left Side)</p> | <p>81</p>  <p>x1 46009719
Corner Trim (Right Side)</p> | <p>82</p>  <p>x1 46009718
Corner Trim (Left Side)</p> | <p>45</p>  <p>x2 45001829
Bolt M6x20</p> | <p>65</p>  <p>x4 45000044
Washer M6 (Big)</p> | <p>67</p>  <p>x2 45000170
Pressure Washer M6</p> |
| <p>68</p>  <p>x2 45000057
Lock Nut M6</p> | <p>61</p>  <p>x4 45001016
Bolt M6x16</p> | <p>64</p>  <p>x8 45000050
Washer M6</p> | <p>69</p>  <p>x4 45000074
Nylock Nut M6</p> | <p>71</p>  <p>x4 45001012
Cage Nut M6</p> | <p>62</p>  <p>x4 45000998
Bolt M6x20</p> |
| <p>70</p>  <p>x4 45001123
Bolt M3.5x16</p> | <p>72</p>  <p>x4 45000113
Rubber Nut M3.5</p> | <p>73</p>  <p>x2 45000114
Bolt M6x30</p> | | | |

Final Result